

**Digital Color
Progressive Scan Camera**

 System: **IEEE1394b**
Baumer TXD50c

 Art. No: **OD108176**

- FireWire™ – IEEE1394b (800 Mbit / sec) progressive scan CCD-camera
- 2440 x 2042 pixel
- Up to 13 full frames per second
- On board integrated color processor for high quality color calculation
- Outstanding image quality and color fidelity
- High sensitivity and dynamic range
- High quality slow scan mode for lowest readout noise
- True partial scan function (ROI) for increased frame rates
- External synchronization via industrial compliant process interface (trigger / flash)
- Integrated 32 MByte RAM for temporarily image data buffering
- Ultra compact and lightweight aluminum housing
- Bilingual: FireWire™ – IEEE1394b and IEEE1394a compatible
- Screw-lock type industrial connector
- Baumer-GAPI: Flexible, generic software interface for Windows / Linux
- DCAM (IIDC V1.31) compatible Baumer driver / Baumer OHCI driver



shown lens needs to be ordered separately

1. Overview

Sensor	2/3" interline progressive scan CCD
Shutter / readout mode	global shutter / progressive scan readout
Number of pixel	2448 x 2050
Scan area	8.5 mm x 7.1 mm
Pixel size	3.45 µm x 3.45 µm
Color filter	RGB Bayer mosaic
Operation modes	
Trigger mode	yes, overlapped operation
Free running mode	yes, overlapped operation
Signal processing	software programmable
Pixel clock	60 MHz fast scan / 30 MHz high quality (HQ) scan
A/D converter	14 bit
Exposure control (t_{exp})	total: 4 µsec .. 2 sec step 1 µsec
Gain control	0 .. 20 dB
Offset (black level)	0 .. 1023 LSB (14 bit)
Image data buffer	32 MByte
Image acquisition	
Data format	YUV , RGB , Mono8, Raw8 or Raw16 image formats

Technical specifications subject to change

Camera image format modes (see item 3)	Format (pixel)	Color coding	Bit per pixel	Pixel clock MHz	Frames per sec. *)	t _{readout}
Format 2 Mode 3	1600 x 1200 center scan high quality scan	YUV (4:2:2)	16	30	15 (10 **) , 7.5, 3.75, 1.875	96 msec
Format 2 Mode 5	1600 x 1200 center scan fast scan	Mono8	8	60	30 (20 **) , 15, 7.5, 3.75, 1.875	48 msec
Format 7 Mode 0	2448 x 2050 full frame high quality scan	Raw8 ***)	8	30	7.5 block size 4 .. 8192 Byte	133 msec
		Raw16 ***)	16		6.5 block size 4 .. 8192 Byte	
Format 7 Mode 1	2448 x 2050 full frame fast scan	Raw8 ***)	8	60	13 block size 4 .. 8192 Byte	67 msec
Format 7 Mode 2	2440 x 2042 full frame high quality scan	Mono8	8	30	7.5 block size 4 .. 8192 Byte	133 msec
		4:1:1 YUV8	12		7.5 block size 4 .. 8192 Byte	
		4:2:2 YUV8	16		6.5 block size 4 .. 8192 Byte	
		4:4:4 YUV8	24		4 block size 4 .. 8192 Byte	
		RGB8	24		4 block size 4 .. 8192 Byte	
Format 7 Mode 3	2440 x 2042 full frame fast scan	Mono8	8	60	13 block size 4 .. 8192 Byte	67 msec
		4:1:1 YUV8	12		8.5 block size 4 .. 8192 Byte	
Partial scan function	yes, format freely programmable in all modes (binning on partial scan ok)					
Advanced feature						
Look up table	on request: user programmable (input 12 bit, output 12 bit / 8 bit) or Gamma					
Test pattern function	yes					
Image info header	no					
Data quality	at 20 °C, gain = 1, exposure time = 32 msec, full frame mode, slow scan					
Readout noise	$\sigma < 0.5$ LSB (8 bit) typical					
Dynamic range	typical > 54 dB					
Optical interface	C-Mount option: CS-Mount					
Optical filter	Hoya E-CM500S option: super polished, dust protection, daylight filter or no filter					
Process interface functions						
Async. trigger	yes, trigger mode operation, software trigger and external trigger separately selectable external trigger in trigger mode 0 (overtriggered signals and trigger signals during the readout time will be notified in the received image header)					
External flash sync	yes, delay_value ≤ 4 μ sec duration_value (t _{duration}): slow mode = t _{exp} + 64 μ sec fast mode = t _{exp} + 32 μ sec					
Software reset	yes, delay up to 125 msec					

Electrical interface	
Data / control / power	standard single cable IEEE1394b bilingual / 9 pins option: screw lock type connector
Digital input	1: trigger signal, opto decoupled $U_{IN(low)} = 0 \dots 4.5 \text{ VDC}$, $U_{IN(high)} = 11 \dots 30 \text{ VDC}$ $I_{IN} = 20 \text{ mA}$ (typical) rising edge (invert value = true) ****) min. trigger impulse length (t_{min}): 2 μsec trigger delay out of $t_{readout}$ ($t_{delay \text{ trigger}}$): 3 μsec max. trigger delay during $t_{readout}$ ($t_{delay \text{ trigger}}$): slow mode = 64 μsec fast mode = 32 μsec
Digital output	1: flash sync signal, opto decoupled $U_{EXT} = 5 \dots 30 \text{ VDC} / 24 \text{ VDC}$ typical, $I_{OUT} = 16 \text{ mA}$ ****) high active (invert value = true) ****) flash delay ($t_{delay \text{ flash}}$): $\leq 4 \mu\text{sec}$
LED	green: power on / yellow: data transmission active
Power consumption	VCC: 8 .. 33 V I: 415 mA .. 135 mA approx. 4.5 Watt
Environmental	
Storage temperature	-10 °C .. +70 °C
Operating temperature	+5 °C .. +50 °C between +30 °C .. +50°C, note the max. housing temperature
Housing operating temperature	max. +50 °C *****) (measurement point, see item 5)
Humidity	10 % .. 90 % non condensing
Conformity	CE, FCC Part 15 class B, RoHS
Housing	aluminum
Dimensions	36 x 36 x 48 mm ³
Weight	< 90 g
IEEE1394 interface	800 / 400 / 200 / 100 Mbit / sec
Software	Baumer FCAM1394 driver / Baumer OHCI driver SDK for Windows 2000 / Windows XP / Windows Vista (32 bit) / Linux Kernel 2.4.>22, 2.6.xx supported .net platform Baumer TWAIN image capture and camera control software

- *) maximum frame rate in free running mode, effective frame rate depending on camera image format mode settings, set block size and set exposure time ($t_{exp} < t_{readout}$)
- **) possible frame rates which can be achieved in the selected mode, see item 2
- ***) raw color data can be used via the mono color coding ID
- ****) can be inverted via software
- *****) necessary for optimal timing specification

2. Selectable Frame Rates depending on the used IEEE1394 Interface

Format	Mode	IEEE1394 interface	240 fps	120 fps	60 fps	30 fps	15 fps	7.5 fps	3.75 fps	1.875 fps
2	3	800 Mbit / sec					x (10) *)	x	x	x
		400 Mbit / sec					x (10) *)	x	x	x
		200 Mbit / sec						x	x	x
		100 Mbit / sec							x	x
	5	800 Mbit / sec				x (20) *)	x	x	x	x
		400 Mbit / sec					x	x	x	x
		200 Mbit / sec						x	x	x
		100 Mbit / sec							x	x

- *) possible frame rates which can be achieved in the selected mode

3. Camera Factory Settings after Camera Start-up

Camera factory settings after camera start-up	
Operation modes	free running mode
Signal processing	
Exposure control	32 msec
Gain control	factor 1 = 0 dB
Offset (black level)	0
Image acquisition	
Camera image format mode	Format 2 Mode 3 / 3.75 fps
White balance	active, adjusted on light source value = 5000 K (D50)
Partial scan function	not active
Electrical interface	
Flash sync signal	disabled, digital output set to low status (high impedance) polarity bit = "1"
Async. Trigger	disabled polarity bit = "1"

4. Supported Image Formats via fxlib.dll (Baumer FCAM driver)

4.1 Supported Image Format

Camera name		TXD50c			
Camera mode		SDK image mode			
	Color coding	Mode ID	Image format	Description	Functions / State
Format 2 Mode 3	YUV (4:2:2)	23	1600 x 1200	center scan high quality scan	T, F
Format 2 Mode 5	Mono8	25	1600 x 1200	center scan fast scan	T, F
Format 7 Mode 0	Raw8 *)	070	2448 x 2050	full frame Raw8 high quality scan	PS, T, F
	Raw16 *)	570	2448 x 2050	full frame Raw16 high quality scan	PS, T, F
Format 7 Mode 1	Raw8 *)	071	2448 x 2050	full frame Raw8 fast scan	PS, T, F
Format 7 Mode 2	Mono8	072	2440 x 2042	full frame Mono8 high quality scan	PS, T, F
	4:1:1 YUV8	172	2440 x 2042	full frame 4:1:1 YUV high quality scan	PS, T, F
	4:2:2 YUV8	272	2440 x 2042	full frame 4:2:2 YUV high quality scan	PS, T, F
	4:4:4 YUV8	372	2440 x 2042	full frame 4:4:4 YUV high quality scan	PS, T, F
	RGB8	472	2440 x 2042	full frame RGB8 high quality scan	PS, T, F
Format 7 Mode 3	Mono8	073	2440 x 2042	full frame Mono8 fast scan	PS, T, F
	4:1:1 YUV8	173	2440 x 2042	full frame 4:1:1 YUV fast scan	PS, T, F

*) raw color data can be used via the mono color coding ID

4.2 Software supported / Calculated Color Coding

		Supported / calculated color coding via software							
Baumer-GAPI		Bayer RG8	Bayer RG12	BGR8 Packed	BGR12 Packed	RGB8 Planar	RGB12 Planar	Mono8	Mono12
API Fxlib		Bayer8	Bayer12	Color 3x8x1	Color 3x12x1	Color 1x8x3	Color 1x12x3	Mono8	Mono12
Pixel coding camera	Raw8	x *)							
	Raw16	x	x *)						
	Mono8							x *)	
	YUV (4:1:1)			x				x	
	YUV (4:2:2)			x				x	
	YUV (4:4:4)			x				x	
	RGB8			x *)				x	


*) original camera format

4.3 Abbreviation / Description


SDK	- Software Development Kit
PS	- partial scan
T	- trigger
F	- flash
Mono	- monochrome mode
Color	- color mode
Raw8[16]	- unmanipulated pixel data in Bayer filter pattern in 8 [16] bit
Bayer8[12] / BayerRG8[12]	- unmanipulated pixel data in Bayer filter pattern in 8 [12] bit
Color3x8[12] / RGB8[12] Packed	- software corrected image data for color camera modes in the color data arrangement BGR in 24[36] bit
Color1x8[12]x3 / RGB8[12] Planar	- software corrected image data for color camera modes in the color data arrangement RRR...GGG...BBB in 3x8[12] bit
RGB8	- camera calculated image data for color camera modes in the color data arrangement RGB in 24 bit
YUV (4:1:1)	- camera calculated image data for color camera modes in the color data arrangement YUV (4:1:1) in 12 bit
YUV (4:2:2)	- camera calculated image data for color camera modes in the color data arrangement YUV (4:2:2) in 16 bit
YUV (4:4:4)	- camera calculated image data for color camera modes in the color data arrangement YUV (4:4:4) in 24 bit
Mono8[12]	- camera or software calculated image data for monochrome camera modes in 8[16] bit

5. Timing Operation Modes

Trigger Mode: start up time

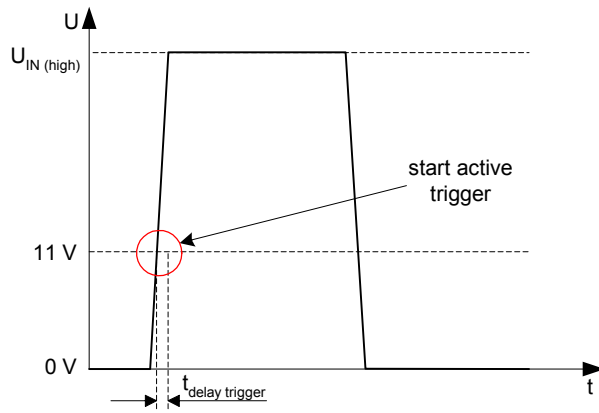

Trigger Mode: trigger mode 0, overlapped trigger

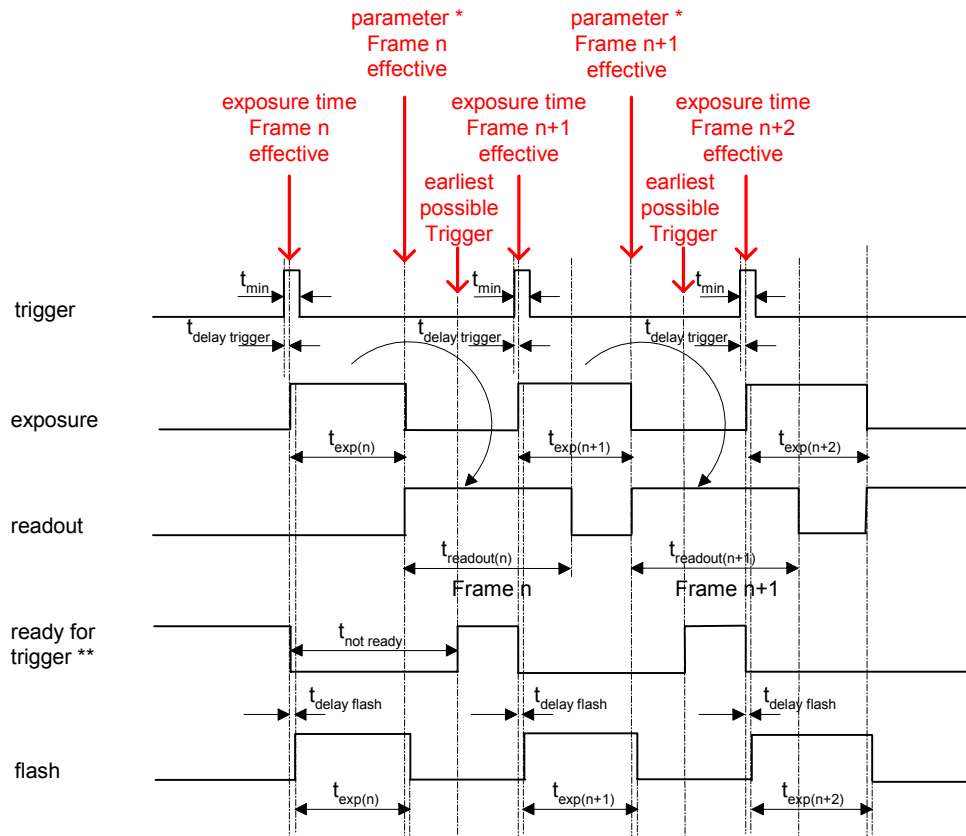

$$t_{exp} < t_{readout}: t_{\text{earliest possible trigger (n+1)}} = t_{readout(n)} - t_{exp(n+1)}$$

$$t_{exp} > t_{readout}: t_{\text{earliest possible trigger (n+1)}} = t_{exp(n)}$$


$$t_{exp} < t_{readout}: t_{\text{not ready (n+1)}} = t_{exp(n)} + t_{readout(n)} - t_{exp(n+1)}$$

$$t_{exp} > t_{readout}: t_{\text{not ready (n+1)}} = t_{exp(n)}$$

* image parameter: offset
 global gain
 mode
 partial scan

** signal is not available as digital output

Trigger Mode: trigger mode 0, overlapped trigger , when $t_{exp(n+2)} > t_{exp(n+1)}$

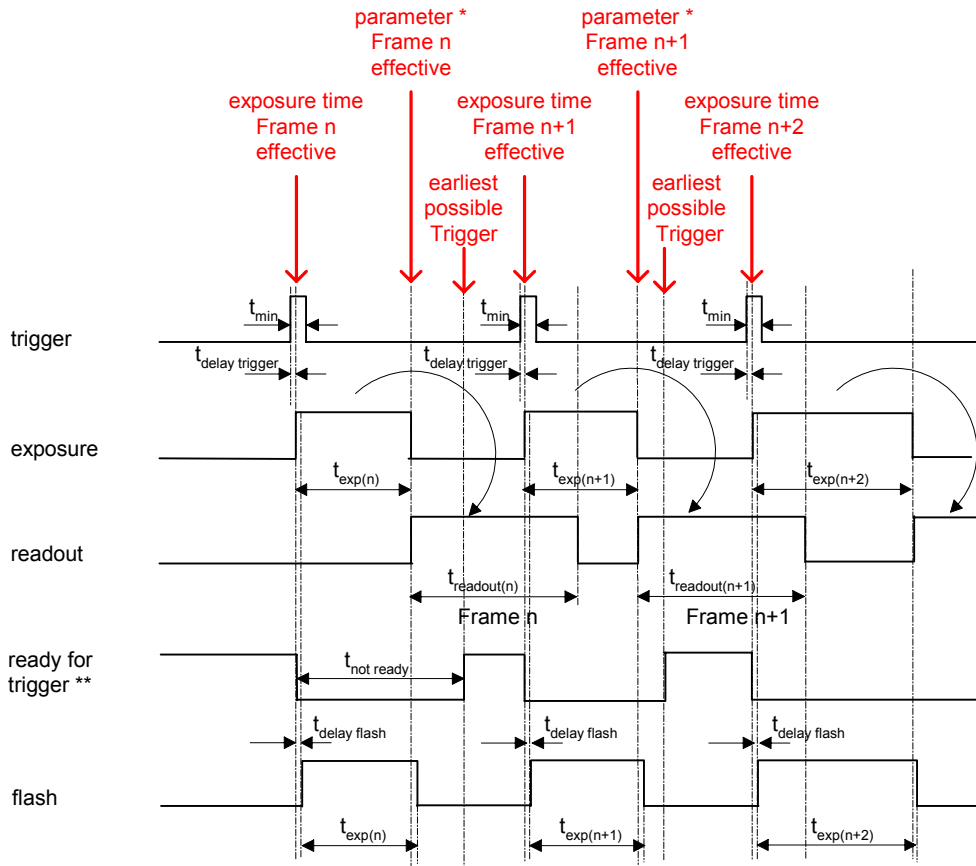

$$t_{exp} < t_{readout}: t_{earliest\ possible\ trigger\ (n+1)} = t_{readout(n)} - t_{exp(n+1)}$$

$$t_{exp} > t_{readout}: t_{earliest\ possible\ trigger\ (n+1)} = t_{exp(n)}$$


$$t_{exp} < t_{readout}: t_{not\ ready\ (n+1)} = t_{exp(n)} + t_{readout(n)} - t_{exp(n+1)}$$

$$t_{exp} > t_{readout}: t_{not\ ready\ (n+1)} = t_{exp(n)}$$

* image parameter: offset
 global gain
 mode
 partial scan

** signal is not available as digital output

Trigger Mode: trigger mode 0, overlapped trigger , when $t_{exp(n+2)} < t_{exp(n+1)}$

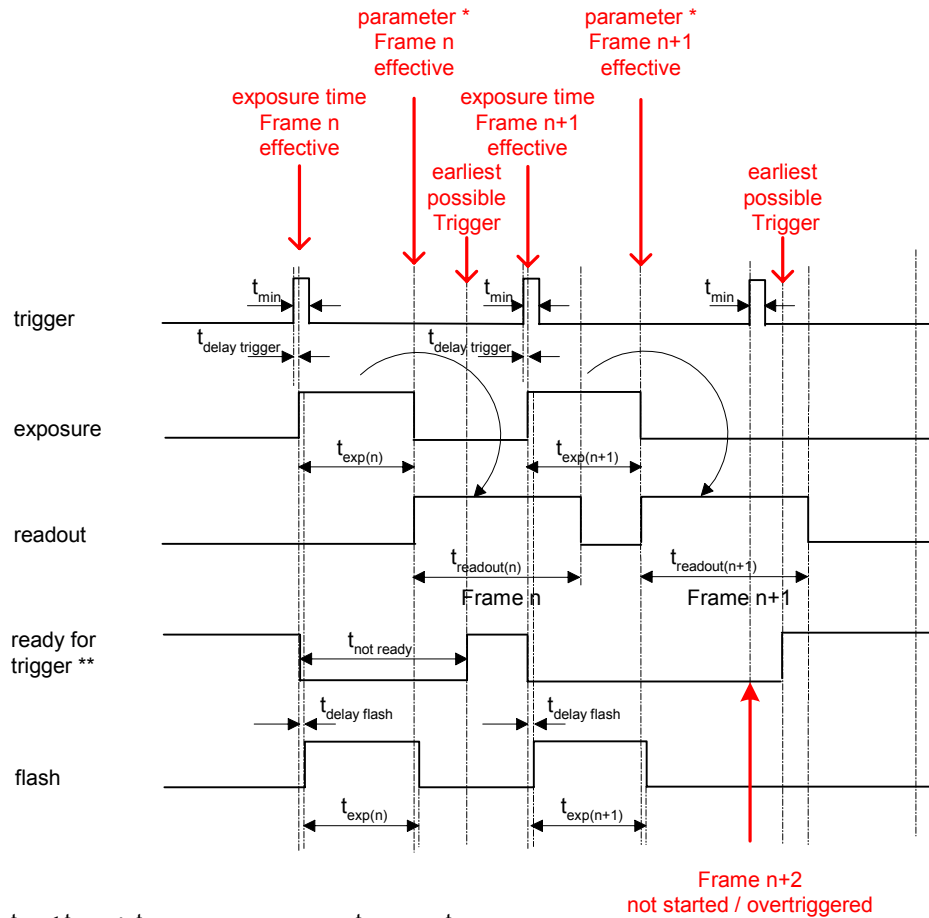

$$t_{exp} < t_{readout}: t_{earliest\ possible\ trigger\ (n+1)} = t_{readout(n)} - t_{exp(n+1)}$$

$$t_{exp} > t_{readout}: t_{earliest\ possible\ trigger\ (n+1)} = t_{exp(n)}$$


$$t_{exp} < t_{readout}: t_{not\ ready\ (n+1)} = t_{exp(n)} + t_{readout(n)} - t_{exp(n+1)}$$

$$t_{exp} > t_{readout}: t_{not\ ready\ (n+1)} = t_{exp(n)}$$

* image parameter: offset
global gain
mode
partial scan


** signal is not available as digital output

Free Running Mode: overlapped operation

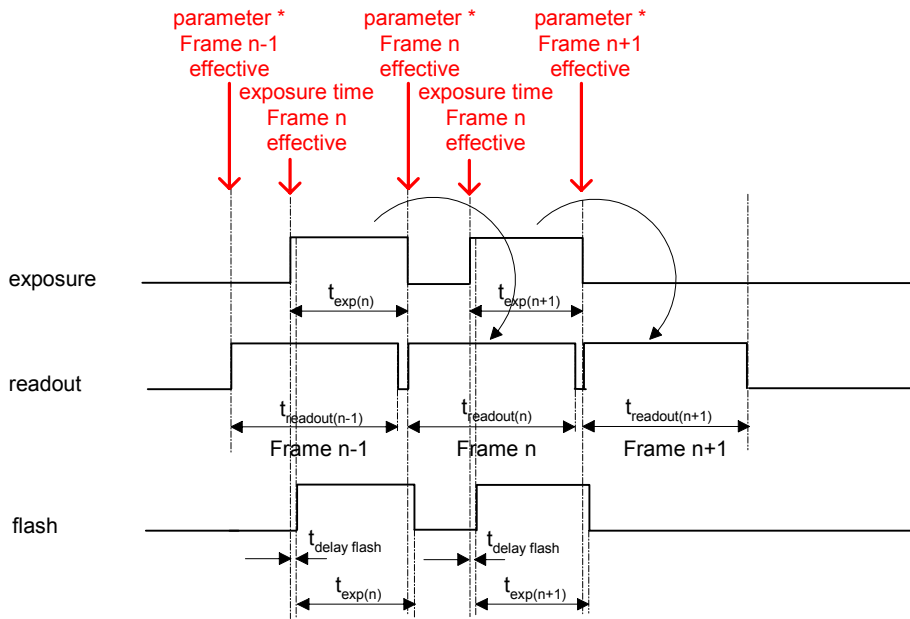


* image parameter: offset
 global gain
 mode
 partial scan



6. Housing

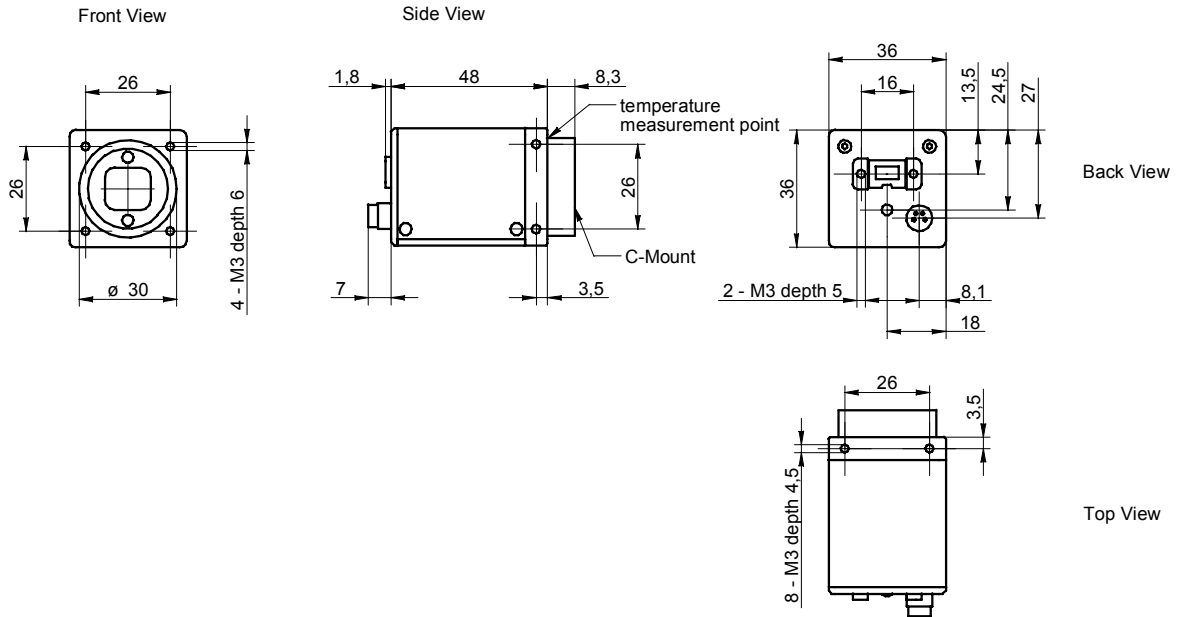

7. Connectors / Electrical Interfaces


7.1 Pin assignment:

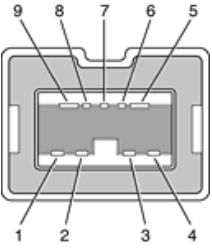IEEE1394b	Pin
	1: TPB- 2: TPB+ 3: TPA- 4: TPA+ 5: GND A 6: GND Power 7: not used 8: Voltage Power 9: GND B

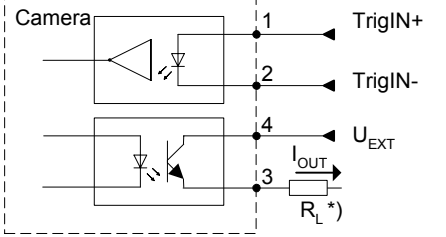
Trigger Flash	Type: Lumberg RSMESD 4pin.
	 <p>*) resistor must be used, $I_{OUT} = 16 \text{ mA}$ by $U_{EXT} = 24 \text{ VDC}$ recommended, drawing shown above example for using high active signal</p>
	Trigger / Flash cable wires color *): 1 = brown 2 = white 3 = blue 4 = black

*) shielded trigger / flash cable should be used and ordered separately

7.2 Flash sync sample $U_{EXT} = 24\text{ VDC}$ high active:

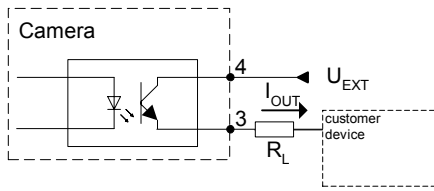


Timing example:
 measurement condition $U_{EXT} = 24\text{ VDC} / I_{OUT} = 16\text{ mA}$

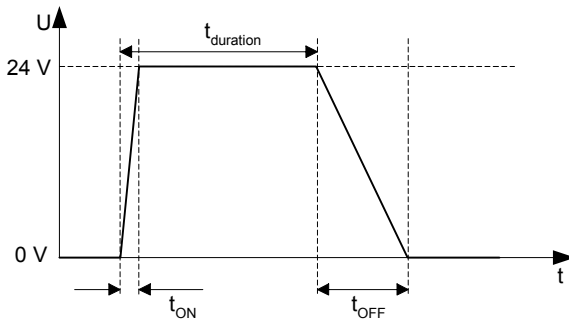


t_{ON} time = typ. 2 μsec
 t_{OFF} time = typ. 40 μsec

7.3 Flash sync sample $U_{EXT} = 24\text{ VDC}$ low active:

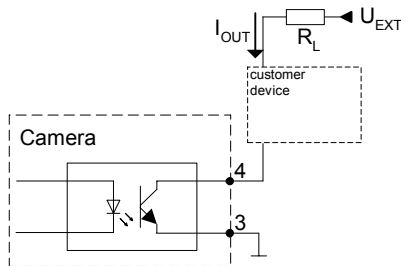

Timing example:
 measurement condition $U_{EXT} = 24\text{ VDC} / I_{OUT} = 16\text{ mA}$

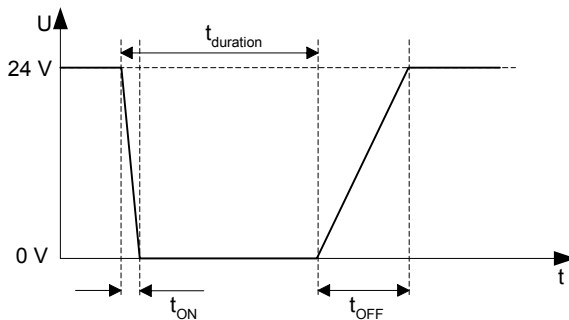

t_{ON} time = typ. 2 μsec
 t_{OFF} time = typ. 40 μsec

End of Document